









 








PHIRO – Speed Car

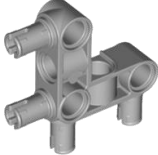

PARTS LIST

SL. NO.	PART NAME	PART NUMBER	IMAGE	QUANTITY
1	13M Beam	41239		2
2	9M Beam	40490		2
3	15M Beam	32278		3
4	7M Beam	32524		2
5	5M Beam	32316		2
6	Tyre Baloon Wide 56 x 26 RIM Wide W Cross 30 x 20	55976 56145		2

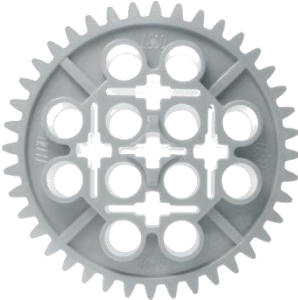  SL. NO.	PART NAME	PART NUMBER	IMAGE	QUANTITY
7	5M Cross Axle	32073		2
8	7M Cross Axle	44294		2
9	3M Connector Peg	6558		4
10	2M Fric.Snap Cross Hole	32054		4
11	Angular Beam 90 Deg With snap	55615		2
12	Bush for Cross Axle	6590		2
13	½ Bush	32123		4

SL. NO.	PART NAME	PART NUMBER	IMAGE	QUANTITY
14	8 Gear Wheel	3647		2
15	40 Gear Wheel	3649		2
16	Plate 2 x 2 Round	4032		2
17	CONNECTOR PEG W, FRICTION	4121715		8

 
01

 9M x 2

 13M x 2

 x 4

 x 4

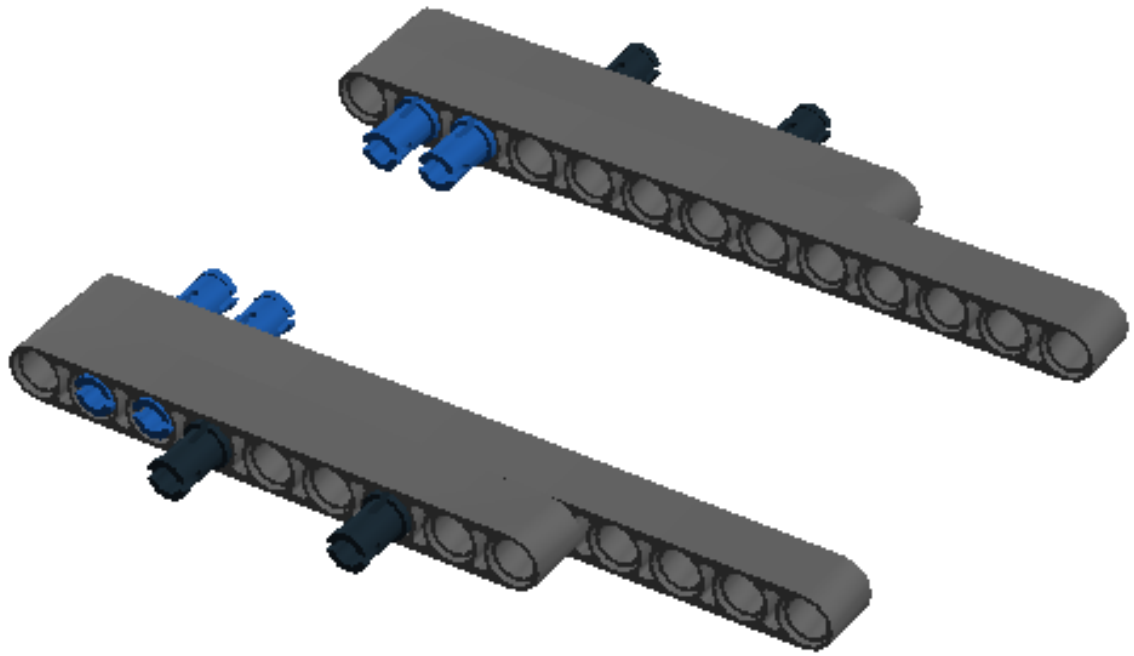


02



7M x 2



 
x 4

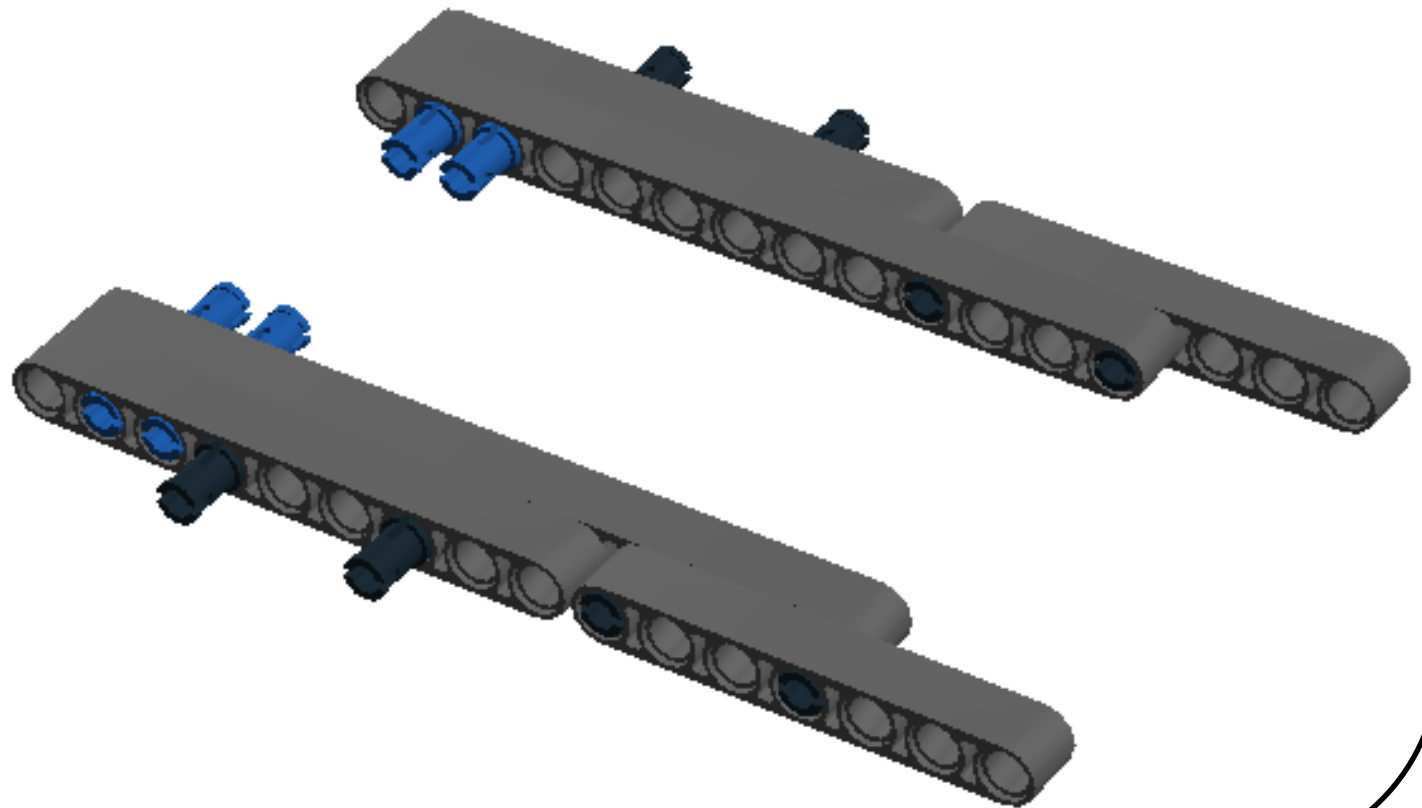


03



 
15M x 2

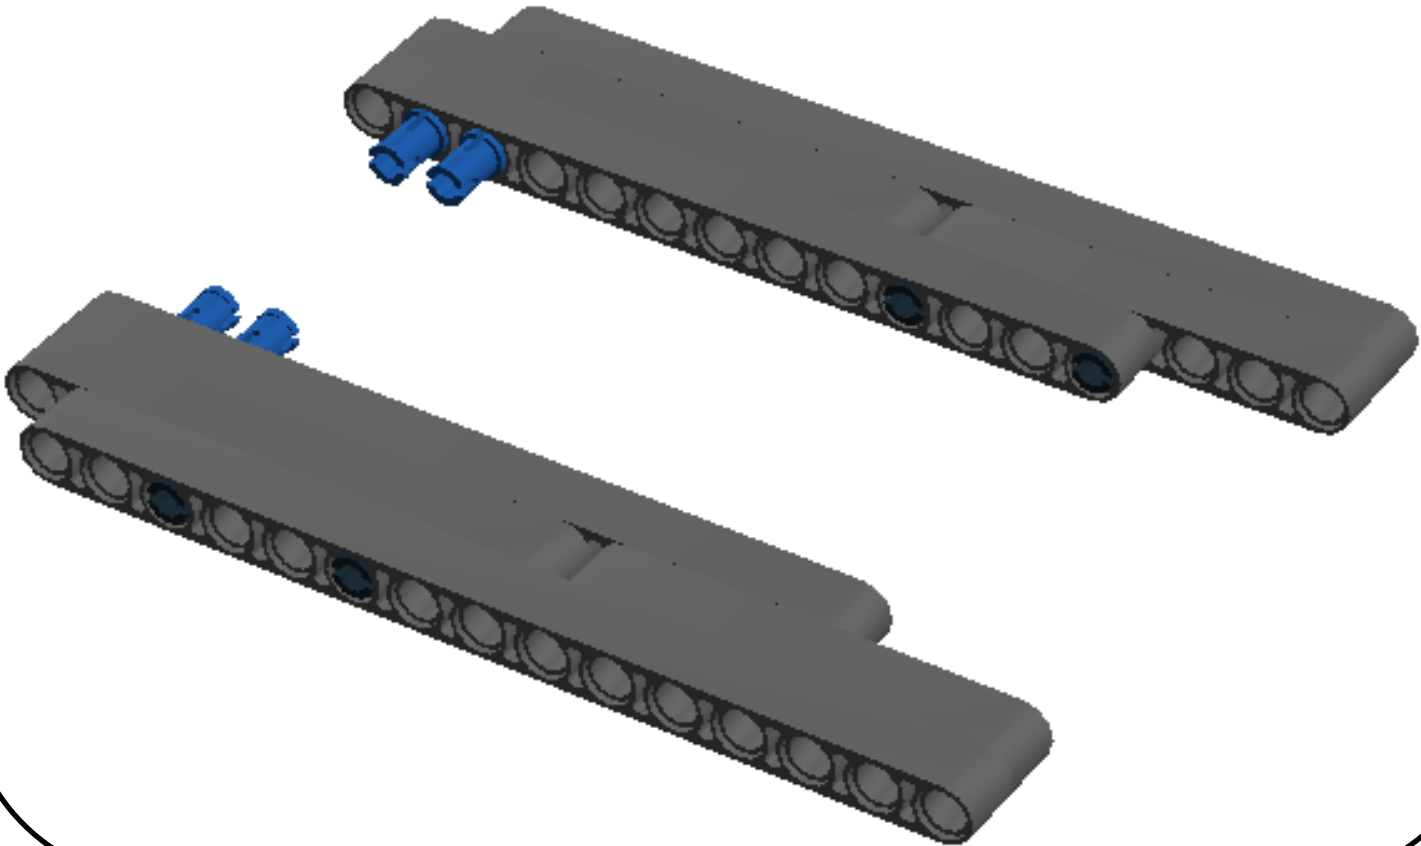

04

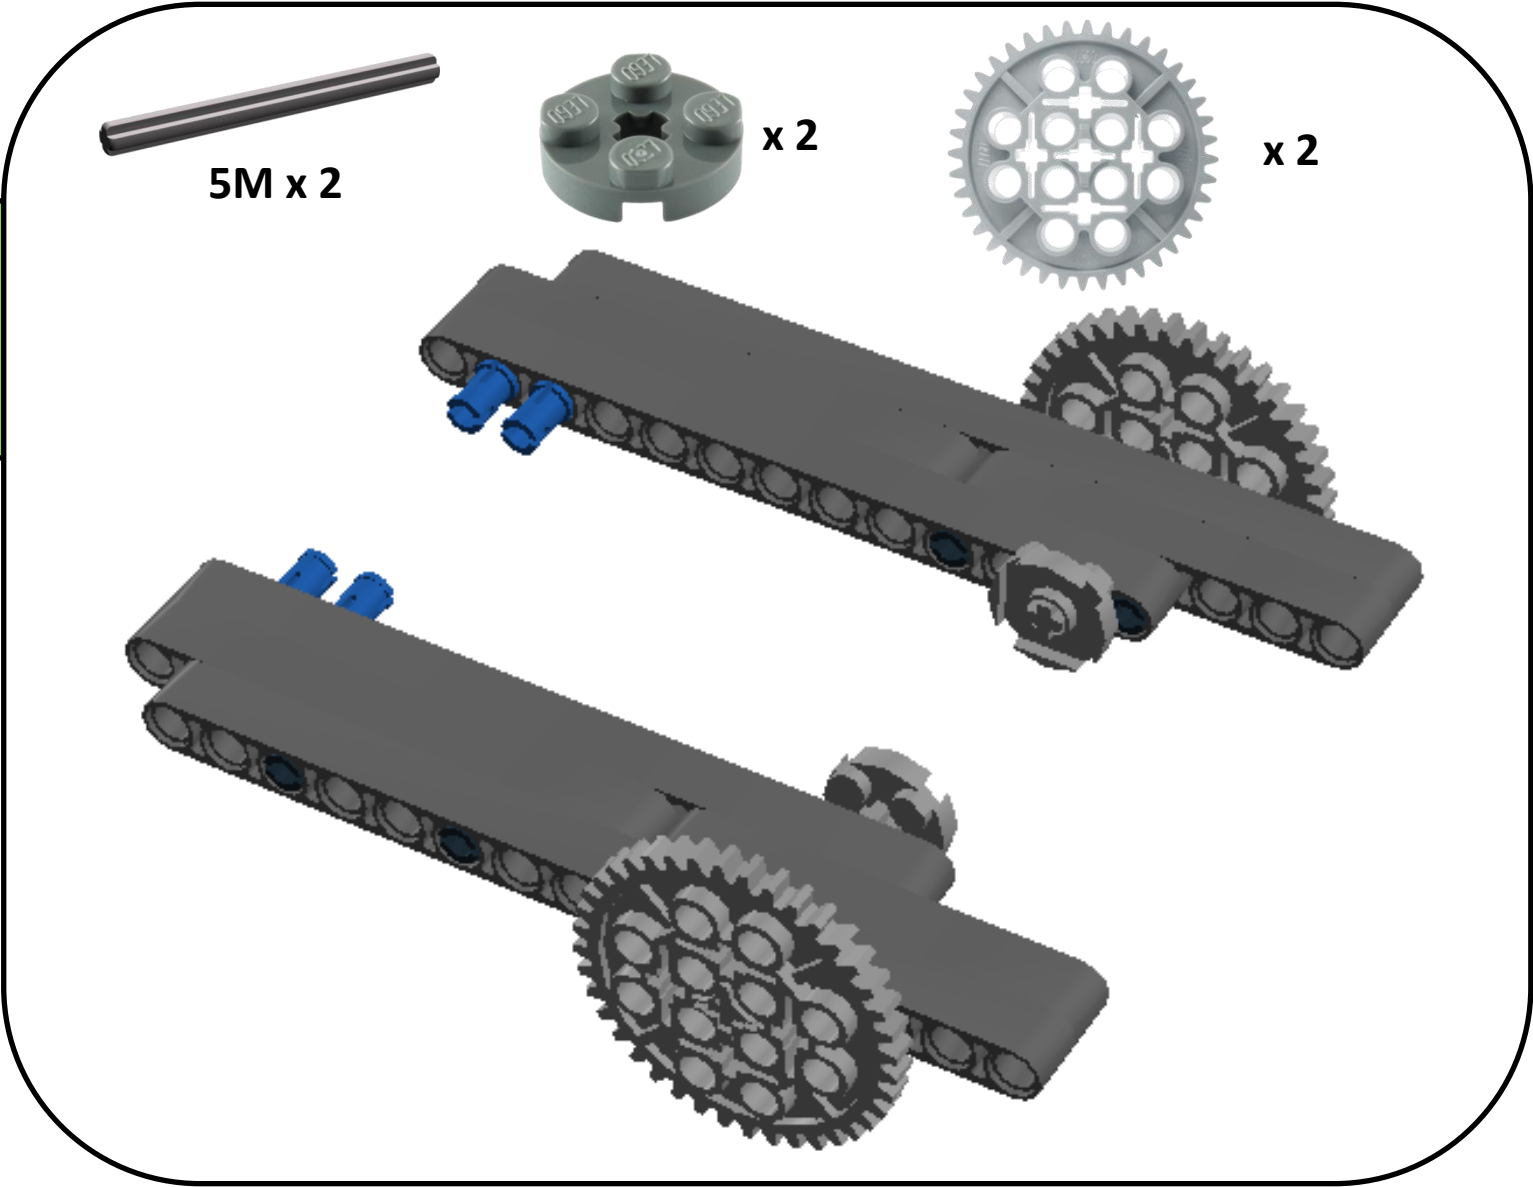 


05

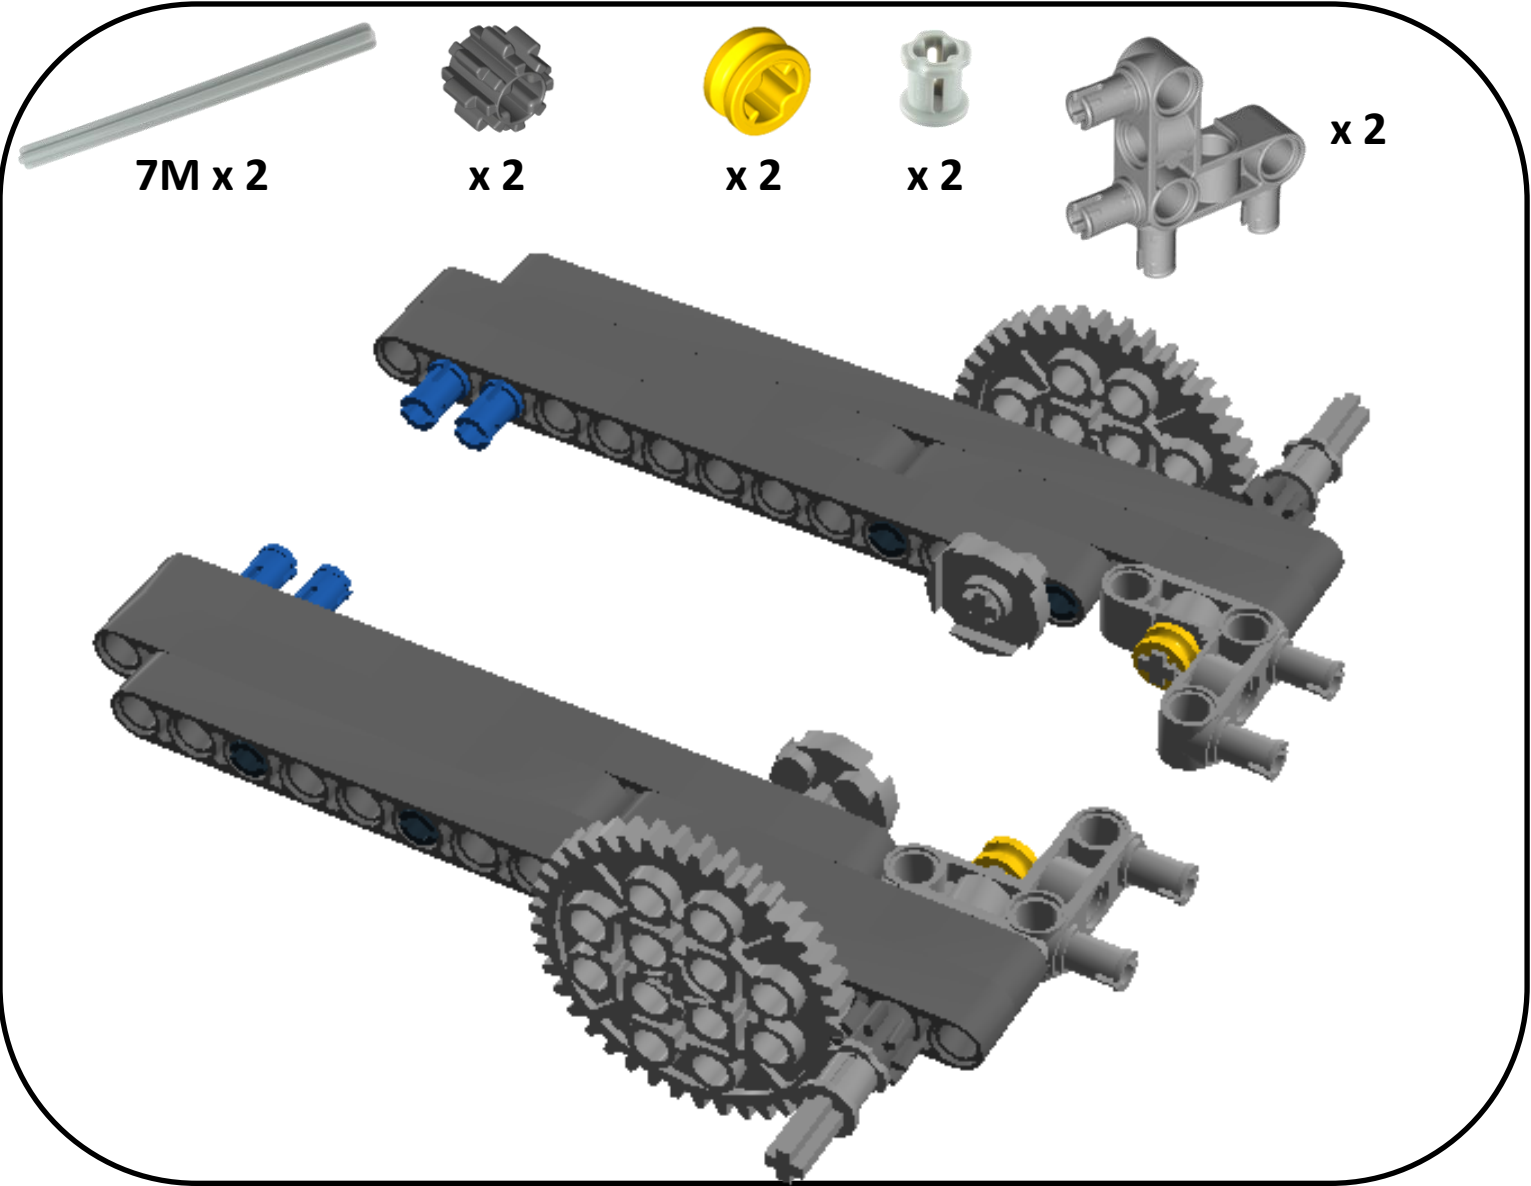 

06

 x 2

 
 x 2

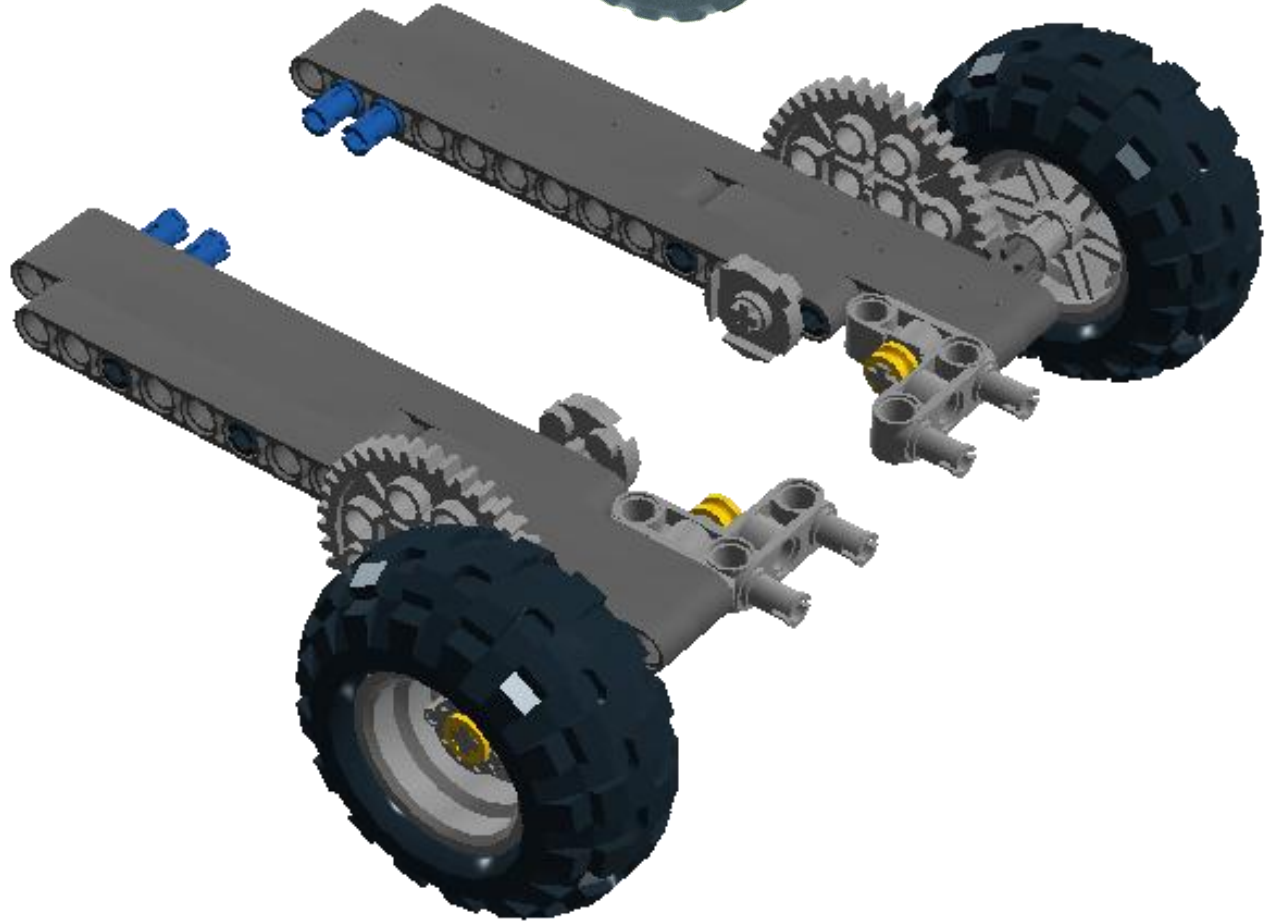

07



 5Mx 2

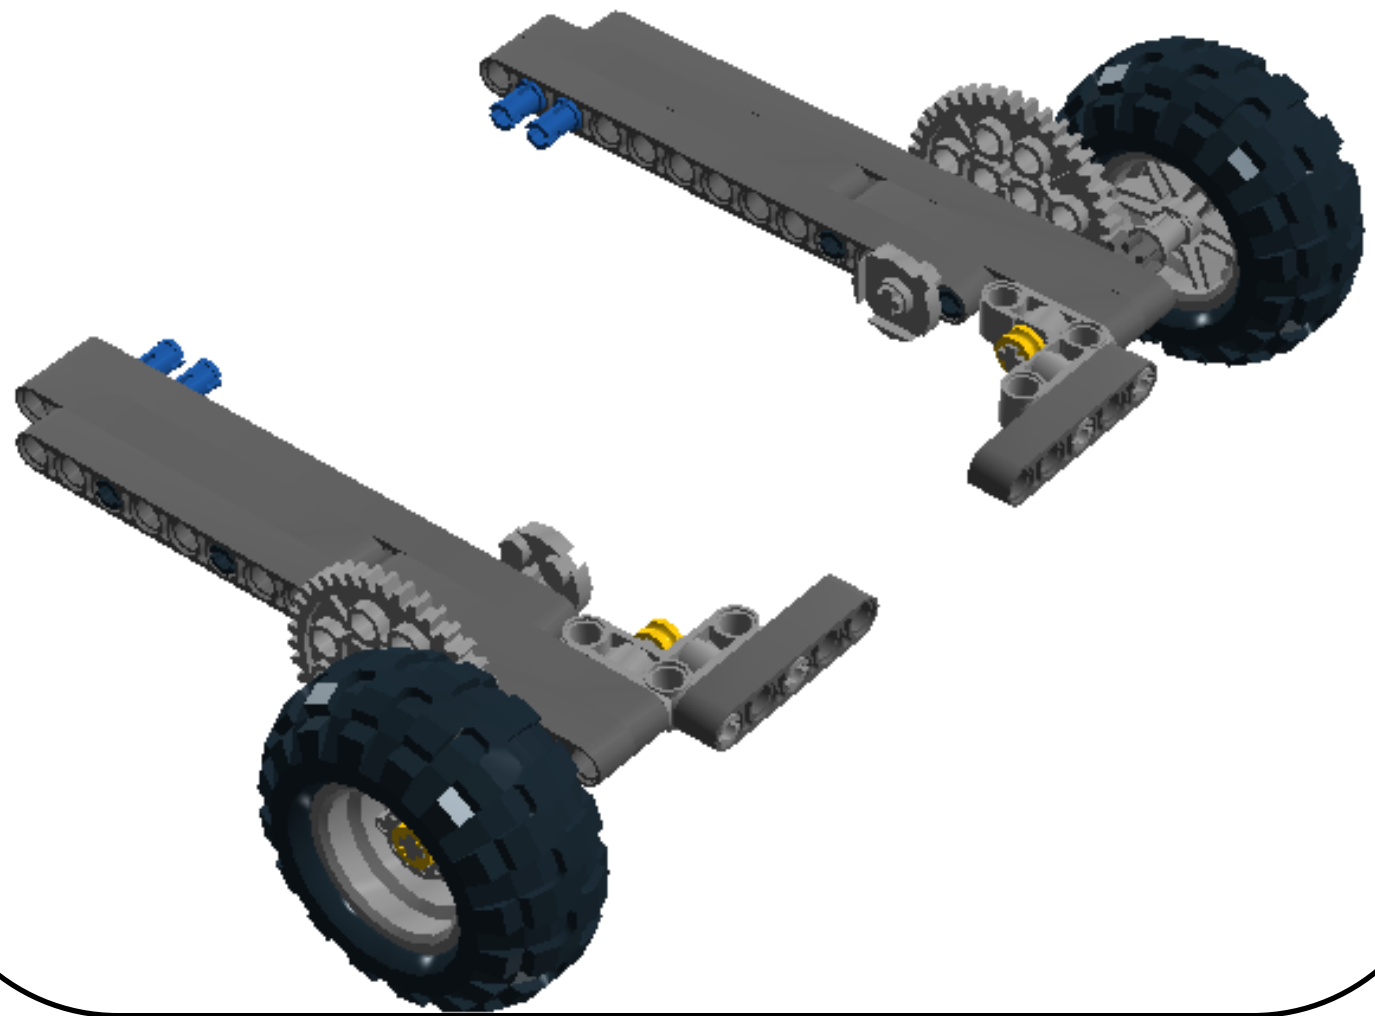


08




15M x 1



 x 4

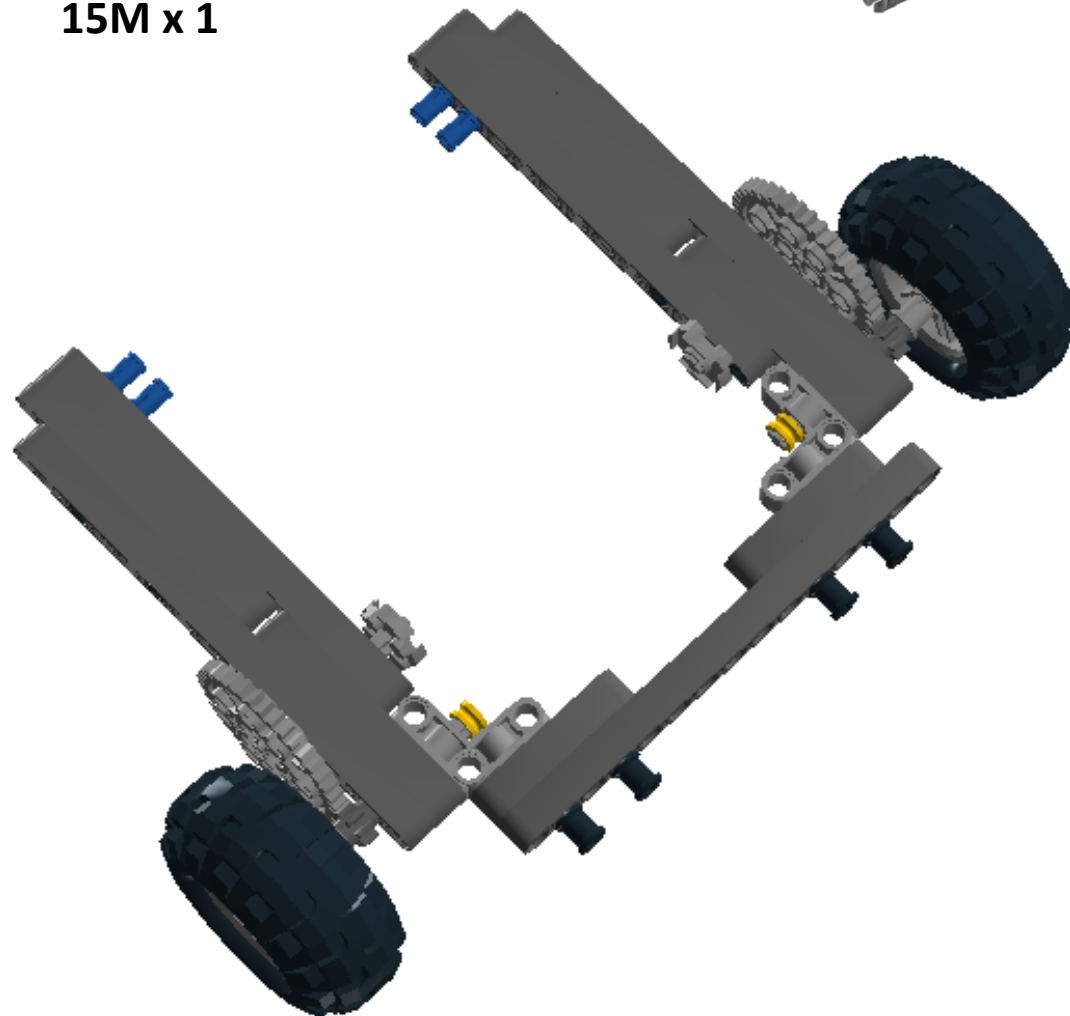

09

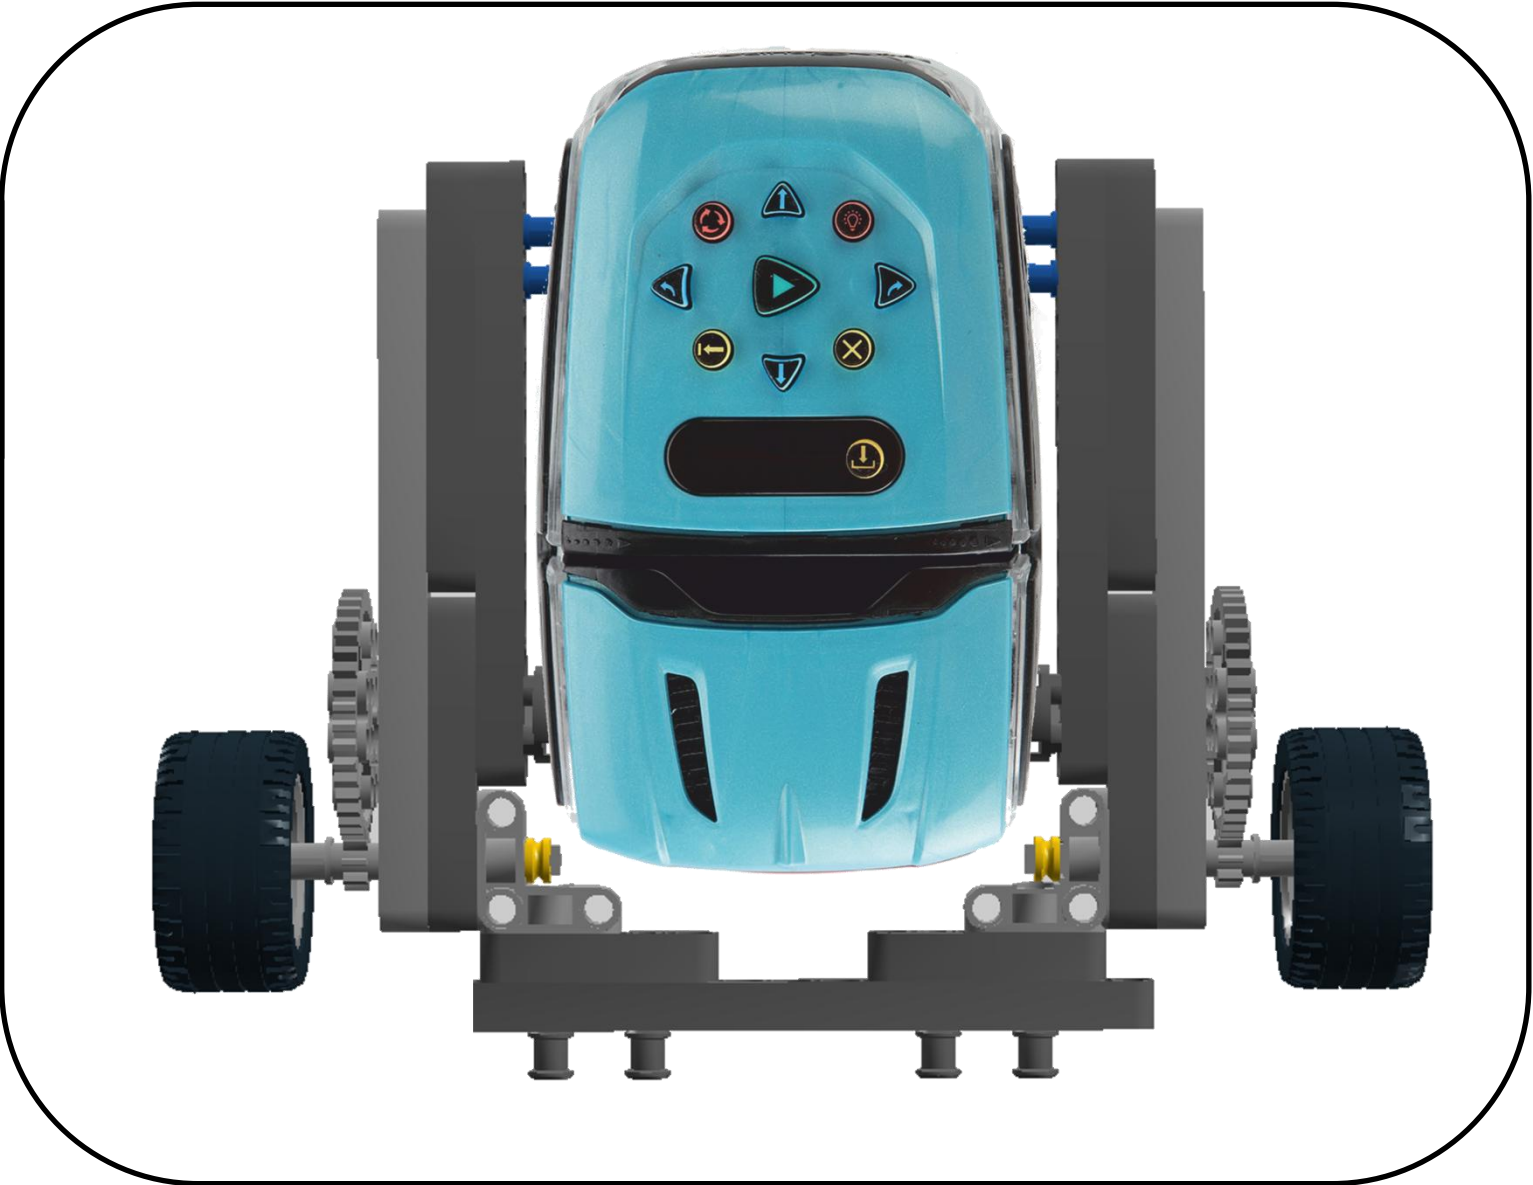 




Programming “Speed Car”

Using **PHIRO UNPLUGGED**

Swish Card Mode

 - Switch ON Phiro.
- Go to Swish Card Mode.
- Swipe these cards .

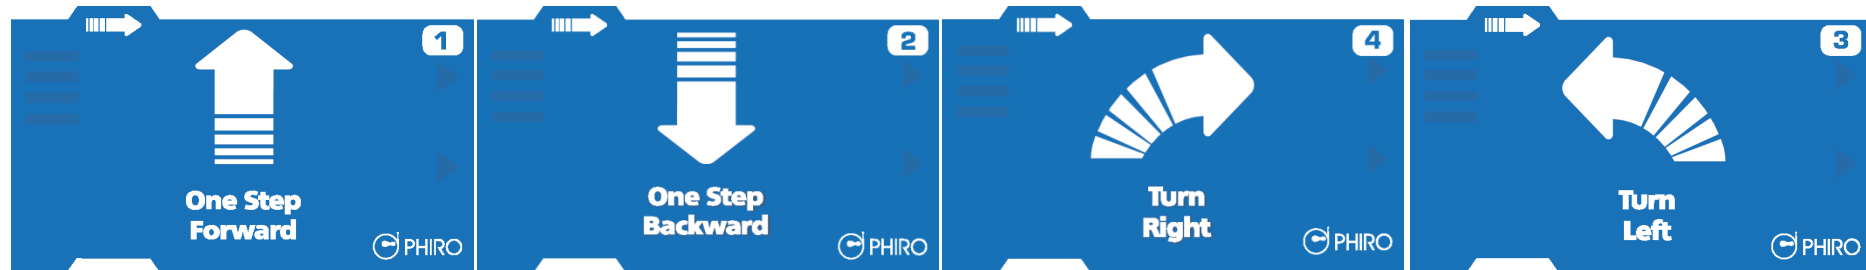

- Press Download



- Press Play



Programming “Speed Car”

Using **PHIRO PRO**

Bluetooth Mode

- Switch ON Phiro.
- Go to Bluetooth Mode.
- Create Program using below link.
- Connect Pocket Code with Phiro.

[Click here to create and control speed card using “Gyro Control” programming](#)